


RB-MN Mini type agitator operating instruction

(Version 2108-01)

7、Parts list:

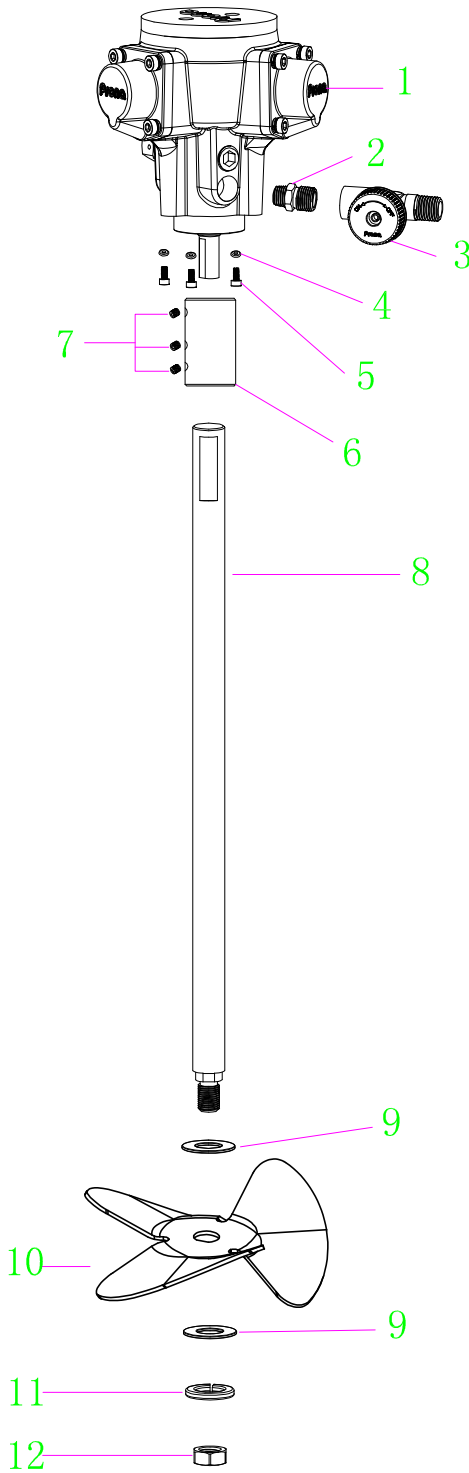

1、 Operation parameter:

Horsepower	Stir Capacity(L)	Axis Dimension(mm)	Carton Size(mm)	Air Pressure(Mpa)/(Psi)	Weiht(kg)
1/16HP	10	12*365	130*210*480	0.5/72.5	0.75

2、 Installation:

- A. Check air motor if fastened by screw(5#).
- B. Connect air motor(1#) with hex connector(2#), then connect hex connector(2#) with volume damper(3#).
- C. Connect volume damper(3#) with connector and air hose.
- D. Check blade(10#) if fastened by spring gasket and nut(11#, 12#).

3、 Use operation:

- A. Firstly, make sure volume damper(3#) closed.
- B. Open air source, adjust volume damper(3#) slowly, make air motor rotate, adjust speed based on your need.

4、 Notice:

- A. Make sure all screws are fastened, agitator doesn't shake.
- B. Firstly, adjust volume damper(3#) slowly to make air motor move, then accelerate. If accelerating at first, agitating rod may shake heavily and cause danger.
- C. Don't touch blade and agitating rod in order to be hurt.
- D. Don't move agitator casually when it works, otherwise, agitating rod waggles and cause danger.
- E. Don't over use agitator, otherwise, air motor may be destroyed.
- F. Below maximum appointing air pressure, otherwise, destroy air motor and agitating rod then cause danger.

5、 Daily maintenance:

- A. Please clean agitating rod and blade after using.
- B. Add lubricant to the internal of air motor and bearing regularly.
- C. Inspect blade loss situation regularly, if damage, please replace with authentic Prona blade.

6、 Spare part name:

NO.	Description	Q'ty
1	M10 Air motor	1
2	Hex connector 1/4PF×PT1/8	1
3	Volume damper	1
4	Spring gasket	3
5	Inner hexagon screw	3
6	Connector	1
7	Connector fixing screw	3
8	Agitating rod(use in RB-BA)	1
9	M10 gasket	2
10	Stainless steel blade	1
11	M8 spring gasket	1
12	M8 nut	1