



寶麗風動工具有限公司

PRONA AIR TOOL MANUFACTURING LIMITED

RPR-5/RPR-5S 塗料減壓閥分解圖 (版次 1605-01)

No.	品名	Name	数量
1	塗料接头 (3/8)	Fluid Connector (3/8)	1
1-1	塗料接头螺帽	Fluid Connector nut	1
2	閥彈簧	Valve Spring	1
3	鋼球 (P08)	Steel Ball (P08)	1
4	塗料接头迫緊	Fluid Connector Packing	1
5	不銹鋼壓塊	Steel Holder	1
6	壓塊迫緊	Holder Packing	1
7	減壓閥下壳	Fluid Regulator Down Crust	1
8	塗料接头 (1/4)	Fluid Connector (1/4)	1
9	頂杆	Ejector Pin	1
10	擋塊	Holder	1
11	膜片	Diaphragm	1
12	彈簧擋塊	Spring Gasket	1
13	O型環	O-Ring	1
14	彈簧墊片	Spring Holder	1
15	螺帽	Nut	1
16	內六角螺絲	Hexagon Screw	6
17	頂杆彈簧	Mandril Spring	1
18	減壓閥上壳	Fluid Regulator up Crust	1
19	彈簧壓塊	Spring Holder	1
20	螺旋螺帽	Spiral Nut	1
21	螺旋壓杆	Spiral Strut	1
22	壓力表套	Pressure Gage Cover	1
23	壓力表	Pressure Gage	1
24	墊片迫緊	Gasket Packing	1

