

Operation and Maintenance Manual

LIGHT BEAR
for pneumatic airless coating equipment

SP1636/28(S)



SP1636



This manual contains important information on warnings and cautions. Read the manual thoroughly before starting to operate the equipment, and follow the instructions.

Always keep the manual handy until such time as the equipment is no longer being used.

If your manual is lost or worn badly, do not hesitate to contact our agency which is closest to you, or the Asahi Sunac Corporation, directly, and ask us to send you a new one.

Thank you for buying our product.

Dear Valued Customer:

Thank you for buying our Pneumatic Airless Painting Equipment, Model <SP1636/28/(S)> LIGHT BEAR.

Please read this manual carefully before starting to operate the equipment. Please pay particular attention to major specifications, warnings and precautions, including prohibited items. Use the equipment appropriately and with care, following the instructions. We hope that by doing so you derive benefit from use of the product over a long period of time.

The gun is geared to industrial painting. It is for use only by those who are familiar with its workings and have undergone proper training; persons without such knowledge should not be allowed to operate the equipment.

Should you have any questions with regard to the manual, please give us the "Model Name" and "Serial Number" of your equipment, so that we may be able to help you with your questions. You can reach us at any of the addresses, phone numbers and fax numbers shown on the back cover.

Thank you,
Asahi Sunac Corporation

Contents

1	For Your Safety	1
2	Specifications, Dimensions and System Configurations	8
3	Setting Up for Operation	9
	General Set-up Precautions	9
	Unpacking and Connections.....	9
4	Operation	10
	Operation	10
	Shutdown and Equipment Care.....	10
	Color change and additive addition precautions	12
5	Maintenance	12
6	Tear Down Inspection and Parts Replacement Procedure.....	13
7	Troubleshooting	15
8	Performance Tips.....	16
9	Component Names.....	17
10	Maintenance Log	25
11	Warranty	25



Please carefully read this manual and get acquainted with the equipment.

Please observe the operating procedures in the manual. Failure to do so may result in **personal injury and/or damage to property**.

This manual covers only minimum safety precautions, and it does not suggest or imply that no other precautions are required. Of course, each enterprise must observe its own rules as well as the laws and regulations of the country or region in which it operates, in addition to the safety precautions in the manual.

Again, shown on the pages that follow are basic and minimum safety precautions for use of our products.

- As shown below, safety precautions are classified into three categories based on the severity of hazards involved.

 WARNING	Alerts a hazardous situation which may result in personal injury, with instructions on how to avoid it.
 CAUTION	Alerts a hazardous situation which may result in damage or breakage to equipment, with instructions on how to avoid it.
NOTICE	Indicates important methods and practical information.

- ※ A hazardous situation included in the CAUTION category could also cause a serious accident depending on how matters develop. All the precautions in the manual convey significant information that you should observe such precautions in order to ensure your own safety and prevent the equipment from failure.

WARNING

Equipment misuse hazard

Never use hazardous materials, such as acidic or corrosive materials, or halogenated hydrocarbon solvents with this equipment.

Should you have any questions with regard to the use of the equipment or materials to be used, please feel free to contact us.

WARNING

Injection Hazard

<<General Safety Precautions>>

- This is a high-pressure painting equipment and an extreme care should be exercised to prevent serious personal injury.

This pump generates very high pressure to feed paint fluid to the airless spray gun.

High-pressure spray or ruptured component pieces from point-blank range can inject fluid or fragments into your body, causing skin injury from which no small amount of toxic substances might enter into the body.

Should that happen, get a proper medical treatment by a specialist, immediately.

If you don't, you may suffer from a life-long disability or you may get amputated.

Fluid splashed in the eyes or on the skin can also cause serious injury.

<<Emergency Medical Treatment: A Must>>

If a high-pressure fluid splashes on your skin or into the eyes, go immediately to a specialist and tell him/her exactly what type of paint fluid you were using in order to obtain proper medical treatment.

- Don't point the gun at anyone or at any part of your body.
Stay away from the trajectory of spray jet from the nozzle.
- Don't put your hand or fingers over the spray nozzle.
- Don't attempt to use the painting equipment -- until you are fully acquainted with its operation.
- Be extra vigilant when operating an air-spray painting equipment.

<<Spray Gun Safety Mechanisms>

- The spray gun is equipped with safety mechanisms. Use them properly.
- Each time you use a spray gun, check to see, in advance, if all the safety mechanisms operate properly.
- Do not alter or modify or remove any part of the gun: the gun may behave unexpectedly and personal injury may result.

Trigger Lock

- When not spraying, always lock the trigger safety lock in order to disable trigger.
If you forget to lock the trigger, it may be pulled accidentally.

Chip Guard

- When spraying, always put the chip guard on the gun.
The chip guard alerts injection hazard, reducing occurrences as a result.
The guard, however, cannot prevent hand or part of body from getting close to the nozzle accidentally.

Trigger Guard

- Don't spray with the trigger guard removed. This guard prevents the trigger from being pulled accidentally when the gun is dropped or hit by something.

WARNING

<<Nozzle Safety Precautions>>

- Don't put your hand or fingers or anything over the spray nozzle.
- Be extra careful when cleaning or replacing the nozzle.
If the nozzle gets clogged while spraying, immediately lock the trigger safety lock and relieve the fluid pressure in accordance with the "Pressure Relief Procedure," and then take off the nozzle for cleaning.
It is dangerous to wipe sticky paint off the nozzle with some residual pressure still remaining or without locking the trigger safety lock.

When relieving pressure, follow the procedure below:

<<Pressure Relief Procedure>>

To reduce the risks of injury from injection, splashing fluid on the skin or in the eyes, etc., relieve the pressure following this "Pressure Relief Procedure" whenever you: Inspect the pump or gun, Remove or mount the nozzle for cleaning or replacement, Stop spraying.

The step-by-step procedure:

- ① Lock the trigger.
 - ② Shut off air supply by turning the pressure control dial counter-clockwise, bringing down the pressure all the way.
 - ③ Relieve the ball cock, bring down the system pressure to zero, unlock the trigger and pull it for double-checking.
 - ④ Lock the trigger again.
- When the nozzle or hose is clogged or when it is suspected that some pressure still remains after going through the "Pressure Relief Procedure," slowly loosen the chip guard mounting nut or the connector at hose end, gradually releasing the pressure until it is completely relieved. Then inspect the nozzle and hose.

WARNING

Equipment Misuse Hazard

<<General Safety Precautions>>

- Misuse, such as use of too much pressure, unauthorized component modification, improper paints or solvents, use of worn or broken part, may result in a serious accident like pump breakage, unexpected fluid injection, fluid splashed in the eyes or on the skin that possibly causes personal injury, or even fire or explosion.
- Don't alter or modify pump parts without our authorization or approval, for such a change may result in equipment failure or malfunction.
- Inspect the whole system periodically. Repair or replace parts as required.
- When conducting spray operation, always wear eye protection, protective clothing, and breathing protection recommended by the paint/solvent manufacturer. Depending on the kind of pint fluid used and the ventilation performance, additional personal protective equipment may be required. Please check it out with the paint/solvent manufacturer.

<<Equipment Interior Pressure>>

- Confirm the maximum fluid working pressure and maximum air input pressure of the pump. Be careful not to exceed these maximum pressures when operating the pump. Also, make sure that all component parts used for the equipment, such as hoses, connectors, swivels, are compatible with the maximum pressures. Should you find them not, set the pump at a pressure that does not exceed the lowest maximum operating pressure of all parts and accessories used with the equipment.
- Each time you use the equipment, retighten all the joints before use.

<<Paint/Solvent Compatibility>>

Check the compatibility of the paint and solvent with the "material of the pump parts they come into contact with" against the parts material specifications provided by the pump manufacturer -- before you introduce the fluid (paint/solvent) into the pump.

<<Hose Safety Precautions>>

- High-pressure fluid in the hose can be very dangerous: it could cause injury to the operator or damage to the equipment, spewing out of cracks, damage, wear in the hose, triggered by misuse or spontaneously.
- Please handle hose carefully.
To move a hose from one place to another, don't pull, but carry.
Don't use paint or solvent that is not compatible with the interior and exterior materials of the hose.
- Check the hose for bending or squeezing, for if there is it may cause a local Concentration of pressure, causing possible fluid leak.
- Don't leave hose in an environment where temperature may go up to 80°C or higher or where it may go down to - 40°C or lower.
- Securely retighten hose connectors and joints before use.
- Never use a broken hose.
Check the hose throughout its length for cut, fluid leak, wear, blister, scratches, and loose fittings. Should you find anything wrong, stop using the hose right there and then, and replace.

WARNING

- When you find a fluid leak, take no stopgap measures, such as covering the leak hole by hand or adhesive tape. Such measures will only increase potential hazards.
- When you find a fluid leak, replace the hose with a new one or contact our authorized repair shop.
- Use a hose that is compatible with our standard specifications.
- Our fluid hose standard specifications ensure a sufficient hose durability in a normal operating environment. However, tension is applied to a hose for many hours, it deteriorates in a relatively short time. When tension is applied frequently, it may not last longer than half a year. Under normal operating conditions, replacement in a year would be recommended.

<<Moving Parts Hazard>>

- There is an air-motor piston rod in the air-motor cap. The piston rod moves up and down as air is supplied to the air-motor. When operating the pump, be sure to put the air-motor cap on so that your fingers may not be struck or caught in a pinch or shear point by the moving part, and that your eardrum may not get injured by the deafening exhaust sound.
- There is a step at the piston rod connecting nut in between the air-motor and material cylinder, which moves up and down as the pump operates. So don't touch it when the pump is operating. If you do so, you may get your fingers caught in a pinch point by the packing retainer.
- When checking or servicing the pump and component parts, bring the pressure down in advance in accordance with the "Pressure Relief Procedure" on page 3 in order to prevent the pump from behaving unexpectedly.
- With the pump running, don't leave the painting equipment unattended. Each time you stop spraying for a break or at the end of shift, shut off the air supply.
- Keep people away from the pump, children and adults who are not familiar with the airless painting operation.

WARNING

Fire and Explosion Hazard

<<Source of Fire>>

As liquid flows through the pump and hose, static electricity is generated.

If each component of the painting equipment is not properly grounded, sparks may occur due to static electricity. When there are vaporized solvent, sprayed paint particles, floating dust and other flammables in the atmosphere near the painting equipment, these sparks can cause fire or explosion, possibly causing serious injury to the operator and damage to the equipment.


- Provide fresh air ventilation in the spray area.
- Keep the spray area free of open flames, pilot lights, and other flammables.
- When using a pole gun, stay clear of electric wires.
- Ensure that equipment and conductive painting objects in the work area are properly grounded. Take no chances: when these things are not properly grounded, fire or explosion can occur triggered by electrostatic spark.
- If you feel any electric shock while using the painting equipment, stop spraying immediately and check the grounding of each component of the equipment. Do not use the equipment until you identify and correct the problem.
- Keep a powerful fire extinguisher in the work area.

<<Grounding>>

To prevent hazards associated with static electricity, ground all the pumps, painting objects, painting equipment and components that are used in the area. If they are not properly grounded, ground properly, by all means, in accordance with the grounding procedure set forth by "Electrical Equipment Technical Standard (Class D grounding or equivalent)."

The grounding procedure for each of the painting system components is as follows:

Grounding Pump

- Connect a ring crimp terminal (that comes with equipment) to the pump grounding terminal , the other clip to a Class D grounding object.

Grounding Compressor

- Arrange grounding in accordance with the compressor manufacturer's instructions.

Grounding Hose

- To ensure the grounding of a whole system, be sure to ground the hose. Especially when an extension hose is used, check to see that it is ground properly.
- Once every week, inspect the hose in use for electrical resistance. Class D grounding, our standard grounding, requires the resistance value to be 100Ω or lower. When the hose does not have a maximum resistance label on it, please check it out with the agency from whom you bought the hose or the hose manufacturer directly. Measure the electrical resistance of hose by connecting an ohmmeter to an appropriate location on the hose. If the resistance measured exceeds the maximum value allowed, replace the hose with a new one. Improper grounding of a hose puts the whole system in peril.

Grounding Spray Gun

A spray gun that is securely connected to the properly grounded hose and pump is considered to be grounded properly.

Grounding Painting Object

A contaminated hanger or grounding clip do not ensure proper grounding of a painting object. Keep the hanger and clip clean to maintain proper grounding.

WARNING

Grounding Fluid Container

When your fluid container is made of conductive metal, you can place it on the grounded floor or table. When it is made of something else, you cannot.

Grounding Cleaning Solvent Can

When the cleaning solvent is made of conductive metal, you can place it on the grounded floor or table.

Don't place it on a non-conductive sheet, such as a sheet of paper or corrugated fiberboard.

When you clean the pump or relieve the pressure, hold a metal part of the gun firmly to the side of a grounded metal container and then pull the trigger.

<<Cleaning Safety Precautions>>

Before you get down to cleaning, check to see that the whole painting system and cleaning can are properly grounded. (see "Grounding Cleaning Solvent Can.")

- When cleaning the system, take off the nozzle in accordance with the procedure set forth in the <<Nozzle Safety Precautions>> (on page 3), and bring the pressure down to a minimum level (that is required for flushing with solvent).
- To prevent electrostatic spark, hold a metal part of the gun firmly to the side of a grounded cleaning solvent can (made of metal), and trigger the gun for flushing.

<<Solvent Safety Precautions>>

Do not use halogenated hydrocarbon solvent.

Halogenated hydrocarbon solvent may explode when it comes into contact with the aluminum or plated portion of pressure vessel (pump, heater, filter, valve, gun, etc.), possibly causing fatal or serious injury.

- Typical halogenated hydrocarbon solvents.

Chlorines	Trichloroethylene, Tetrachloroethylene, Ethylene chloride
Bromines	n-Propyl Bromide
Carbon-fluorines	HCFC-225, HFC-43-10mee, HFE-449s1 (HFE-7100)

(Shown above are typical examples and there are, of course, other kinds of halogenated hydrocarbon solvents in the marketplace. Please check with your paint vendors or manufacturers for further details.)

- Spray-mist-filled atmosphere may cause respiration difficulty and/or intoxication. Do not spray in an environment where ventilation is poor, such as indoors, in tunnel, inside the tank, etc. When you spray, exercise care so that the operator, people and livestock near by may not be affected.


NOTICE

The carbon alloy nozzle is precision-machined. To remove nozzle clogging, don't use a hard metal needle but use a soft wooden toothpick, etc. With a toothpick push the stuffed material from the tip of the nozzle, then air blow. A hard metal needle, if used, could damage the nozzle orifice beyond repair.

2

Specifications, Dimensions and System Configurations

● Dimensions

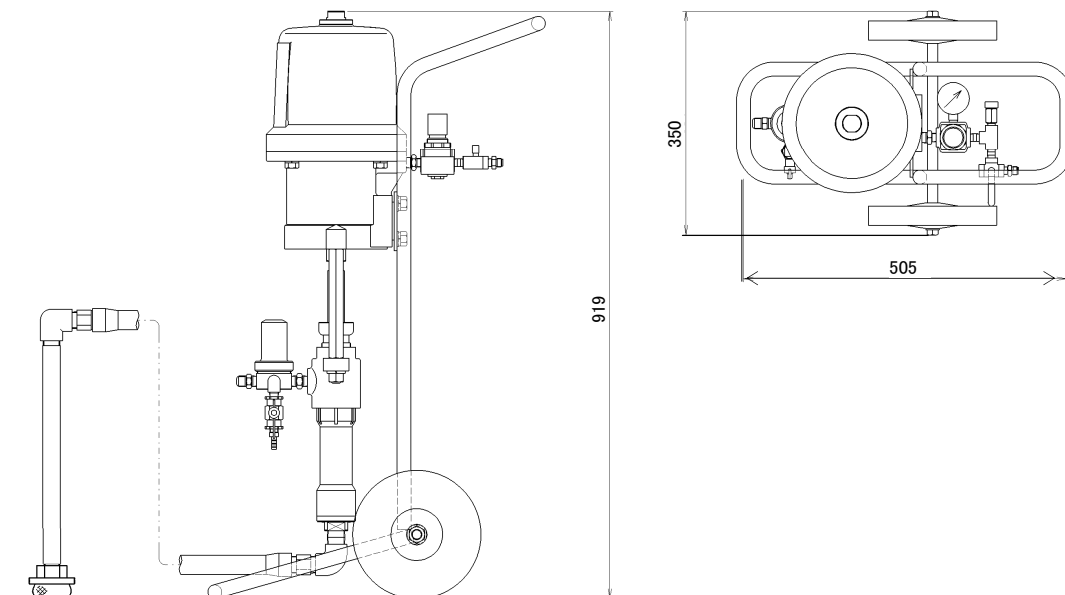

● Specifications

Model	SP1636	SP1628
Name	Light Bear	
Pressure ratio	1 : 20	1 : 30
Fluid flow	3.2L/min (Max. 10 L/min)	2.2L/min (Max. 6.8 L/min)
Maximum fluid working pressure	10Mpa (Air pressure at 0.5MPa)	15MPa (Air pressure at 0.5MPa)
Dimensions	500 ^L × 350 ^W × 900 ^H mm	
Weight	33kg	32kg
Compressor requirements	Continuous 1.5kW (2PS) Intermittent 0.75kW (1PS)	

● System Configurations

Pump	Suction filter
	Suction hose
	Air regulator
	Air pressure gauge
	Nozzle cleaner
	Material filter
	Special tool
	Accumulator hose
Airless spray gun	※
Airless nozzle	
Material hose	

The items marked with ※ do not come with the equipment as standard accessories. Please choose suitable items from our painting equipment catalog that will best suit your applications.

3

Setting Up for Operation

① General Set-up Precautions

- (1) This airless spray equipment uses compressed air for the fluid displacement pump.
Use a compressor with a capacity of 1.5kW (2PS) or larger.
- (2) Supply dry compressed air.

CAUTION

Wet compressed air, if supplied, may cause pump failure, such as valve shifting error, due to freezing or rusting. Watch water accumulation, etc. in the compressor tank.

- (3) Pressure drop occurs when a compressor is installed in a place far removed from the pump. The maximum compressed air pressure supplied to the pump is 0.5 Mpa.
Determine the capacity of compressor taking the compressor-to-pump distance into account.
- (4) Securely ground the grounding wire.
Connect a ring crimp terminal (that comes with the equipment) to the pump grounding terminal (⊕), the other clip to a Class D grounding object.

WARNING

Improper grounding may cause electric shock, fire or explosion.

- (5) When you noticed any failure symptom, take corrective actions in accordance with the “Tear Down Inspection and Parts Replacement” (pages 13 and 14) and “Troubleshooting” (pages 15 and 16).
If your problems still exist after you did all this, don't try to do anything further but immediately contact our agency near you or Asahi Sunac directly, giving us details about the problems. Please rest assured; we'll take care of them.

② Unpacking and Connections

(See pages 18 through 24 for part names.)

Being 100% inspected at the factory before shipment, the airless pump is ready for operation once connections are made with a hose and gun. Upon unpacking, however, please check the contents thoroughly for any damage that may have occurred in transit and for missing parts. If you find anything wrong, please get in touch with our agency near you or us directly at Asahi Sunac.

- (1) Upon unpacking you'll find that the equipment, high-pressure hose, and spray gun are not assembled yet. You'll have to put them together in the manner as described below:
- (2) Connect a ring crimp terminal (that comes with the equipment) to the pump grounding terminal (⊕), the other clip to a Class D grounding object.

WARNING

Improper grounding may cause electrical shock, fire or explosion.

- (3) Connect the accumulator hose to the joint at the outlet of cylinder-shaped material filter.
And connect the fluid hose to the joint further down.

WARNING

Ensure that the fluid hose is hooked up securely. A loosely connected hose may provide injection and splash hazards, possibly causing personal injury or accident.

- (4) Mount the spray gun at the end of high-pressure fluid hose. At this point, do not put the nozzle on, yet.

WARNING

When you mount the spray gun, lock trigger. If you fail to lock the trigger, it may be pulled accidentally and personal injury may result.

- (5) Connect the air hose to the nipple at the air regulator inlet.
With this you have made all the connections that have to be made.

4

Operation

① Operation

▲ Flushing the equipment before first use

Flush the equipment before first use. Check the fluid passage for leak at the same time. If there is any leak, retighten using two (2) special spanner, putting one on the joint, the other on the base. Remove foreign materials, as well.

NOTICE

Foreign materials, such as dust, contaminants, etc., may cause the nozzle to get clogged, resulting in inconsistent spray pattern. Flush thoroughly.

Equipment Flushing Procedure

(1) Provide 3 liters of solvent (cleaning thinner).

Fill an empty can (fluid container) with solvent (cleaning thinner). Put the suction pipe into the can and check to see that the suction filter is fully immersed in the solvent.

(2) Gradually open the air regulator (turn clockwise) and supply compressed air and then start operation. Set the compressed air at about 0.1 MPa.

CAUTION

In order to prevent an air regulator from getting damage , unlock the handle of air regulator before operate.

(3) Put the tip of spray gun into solvent and pull the trigger. Solvent circulates through the system, purging air inside (which comes out in the form of bubbles).

This will clean the liquid passage through the system, hose and gun.

(4) Once passage cleaning is done, pull the suction pipe off the fluid can and run the pump idly to completely remove residual solvent within the pump. And then close the air regulator (turn counter-clockwise).

Now it's ready for operation.

▲ Starting and adjusting the pump

(5) Provide a paint fluid can.

(6) Repeat Step (1) through (3), with paint fluid.

(7) Adjust the air regulator to keep compressed air pressure at 0.2 to 0.5MPa.

The fluid pressure of:

SP1636 is 20 times the compressed air pressure,

SP1628 is 30 times the compressed air pressure.

Therefore, when the ratio is:

1:20, fluid pressure will be 4MPa ~ 10MPa,

1:30. fluid pressure will be 6MPa ~ 15MPa or more, causing the pump to stop.

⚠ WARNING

The fluid pressure can be 20, 30 times the operating air pressure, calling for extra care when operating the pump.

(8) Put the nozzle on the spray gun.

⚠ WARNING

Ensure that spray gun's trigger is locked. If you fail to do so, trigger could be pulled accidentally, resulting in personal injury.

(9) Check to see that there is no leak from the joint between the painting equipment and hose.

If you find leak:

Bring the pressure down, Drain the fluid,

Then, locate the point of leakage, Retighten to fix the leak.

② Shutdown and Equipment Care

(1) Check the equipment and hose for leak from joints.

1. Interruption or overnight shutdown with resumption due in 24 hours

① Leave the equipment filled with fluid.

In this case, because air will be purged from the fluid passage keeping the fluid in the way as if it were stored in a paint can, the fluid in the equipment will be kept free from solidification.

2. Long-term shutdown for a period beyond 24 hours

CAUTION

When you use a kind of paint that precipitates rapidly or one that is of high viscosity, flush the equipment in accordance with “Equipment Flushing Procedure” on page 11 when you shutdown the equipment.

② Completely remove fluid from the equipment and keep it empty.

Any fluid paint left inside the equipment, how little it may be, will solidify.
Flush thoroughly with solvent.

CAUTION

When you flush, keep the solvent pressure as low as possible (the minimum pressure enough for flushing).

NOTICE

For a short-term equipment shut-down with resumption due in 24 hours, leave the equipment filled with solvent until you use the equipment again. Do so each time you shutdown the equipment. It doesn't do any harm to the equipment but keeps it in a good operating condition.

(2) Take the nozzle off the gun. Wipe the nozzle mounting surface on the gun with a solvent-soaked rag. Then clean the nozzle (you may dip it into solvent for a while for cleaning).

(3) Set the airless nozzle in the reversed direction with the rear end facing the nozzle cleaner, then loosen the nipple letting air jet out blowing out the materials that clogged the nozzle.

WARNING

Please exercise extreme care when cleaning or replacing the nozzle. Bring the pressure down following the “Pressure Relief Procedure” and then take the nozzle off. It is quite dangerous to try to remove paint stuck in the nozzle unless the pressure is completely removed, with the trigger locked.

Follow the procedure described below to relief pressure.

<<Pressure Relief Procedure>>

① Lock the trigger.

② Shut off air supply by turning the pressure control dial counter-clockwise, bringing down the pressure all the way.

③ Relieve the ball cock, bring down the system pressure to zero.
Unlock the trigger and pull it for double-checking.

④ Lock the trigger again.

● When the nozzle or hose is clogged or when it is suspected that some pressure still remains after going through the “Pressure Relief Procedure,” slowly loosen the chip guard mounting nut or the connector at hose end, gradually releasing the pressure until it is completely relieved. Then inspect the nozzle and hose.

(4) Clean the material filter when the day's work is done.

WARNING

Before you take parts apart, always drain all paint fluid from the system and relief the pump operating pressure down to zero.

(5) Operate the “three-way ball cock” when you have to bring down the pressure instantly, for safety reasons. However, to relieve the paint fluid pressure down to zero, open the “ball cock.”

WARNING

When you shutdown the equipment for interruption or overnight stoppage, always lock the spray gun trigger. If you fail to do so, it may be pulled accidentally, and personal injury may result.

③ Color change and additive addition precautions

- (1) When you change paint fluids, thoroughly flush the can with solvent so that no paint residue may be left unremoved. (Paint residue may cause the nozzle to get clogged.)
- (2) When you add additives, do so through the filter.
- (3) When you change paint colors, take the suction pipe out of the paint can, pull the trigger discharging all paint from the system (this way you can save solvent), then flush it with solvent repeating suction-circulation-discharge circles as many times as it takes to completely flush the fluid passage from the inlet to outlet. After this, change paint colors.

5

Maintenance

Equipment Maintenance Guidelines

- (1) When the pump V packing is worn, replace.
(Rule of thumb: Replace every six months under normal operation condition.)
- (2) When paint is solidified and accumulated in the pump, take it apart and clean.

WARNING

Before you take parts apart, always drain all paint fluid in the system and completely relieve the pump operating pressure and wrap air pressure down to zero.

- (3) Flush the spray gun by shooting solvent. In addition, you need to clean the contacting surfaces between the seat housing and nozzle by wiping with a thinner-soaked rag. When paint is solidified in the gun, take it apart and clean.

WARNING

Please exercise extreme care when cleaning or replacing the nozzle. Bring the pressure down following the “Pressure Relief Procedure” and then take the nozzle off. It is quite dangerous to try to remove paint stuck in the nozzle unless the pressure is completely removed, with the trigger locked.

- (4) Always keep the high-pressure fluid hose clean, free from paint residue and other contaminants. Remove deposited paint, if any. Always keep the hose free from mechanical shock. (e.g., don't stomp on, don't put things on, don't run over with vehicle.)

WARNING

Never use a broken hose. Check the hose throughout its length for cut, fluid leak, wear, blister, scratches, and loose fitting. Should you find anything wrong, stop using the hose right there and then, and replace.

6

Tear Down Inspection and Parts Replacement Procedure


WARNING

Before you take parts apart, always drain all paint fluid in the system and completely relieve the pump operating pressure and wrap air pressure down to zero.

① Air Motor


When you apply grease to the cylinder interior or replace perishable parts, follow the procedure shown below. (See the exploded diagrams for the numbers referred to in the text.)

Before you take parts apart, always drain all paint fluid in the system and shutdown compressed air supply.

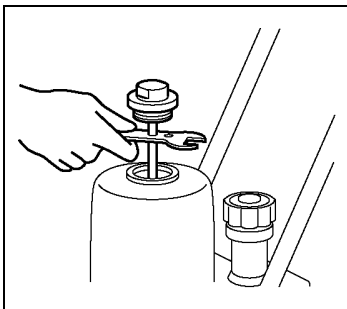


- ① Remove the cap (4) from the cylinder (1) using a special spanner that comes with the equipment.


At that time, the trip rod (15) comes off with the cap. Disconnect the trip rod from the cap with a spanner. (If the trip rod is not lifted up enough to provide a room for a spanner to be manipulated, lift the cap. This will shift the valve pushing the shift rod up making access by a spanner possible.)

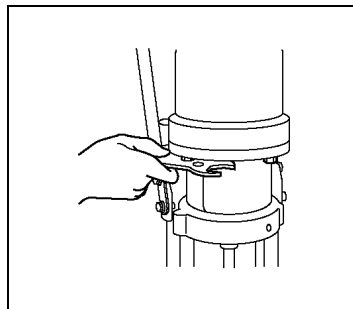


- ② Remove four bolts.

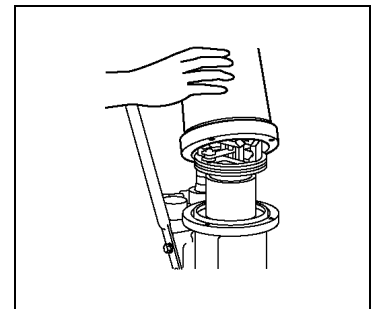


- ③ Carefully lift the cylinder and take it out from the top. The entire piston (3) and air valve (16) will be exposed.

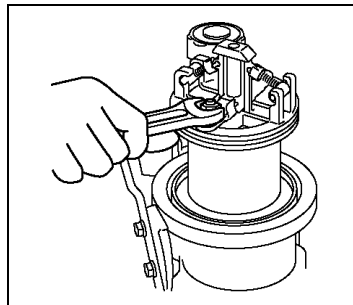

- ④ When you replace the air valves (12) and (16), do so with the toggle shuttle (5) lifted. (In this case, the spring (10) will be pointing up diagonally.)

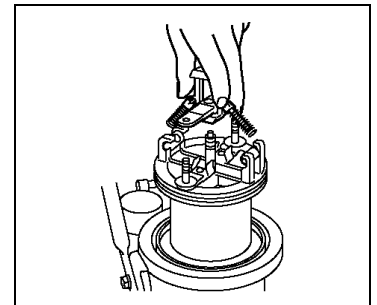

- ⑤ Remove the wire (11) and nut (18). Carefully lift the toggle shuttle (5) off.

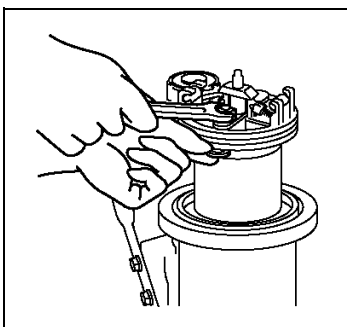

- ⑥ When you put them together again, do so in the reversed order. When reassembling, carefully mount the stay so that it may move perpendicular to the hole and adjust the nut (18) so that a 3mm "clearance" may be provided between the air valve (12) and air hole. If you find any damage to the "O"-ring, replace.


② Material Cylinder

(See page 21 for configurations and part names.)


Shown below are the replacement procedures for the booster “V packing” at the upper end of the cylinder and the two suction “V packings” at the lower end of piston rod.

Packing can be adjusted by retightening the packing retainer (2).
Service the pump setting it flat horizontally.


[Booster V Packing Replacement Procedure]

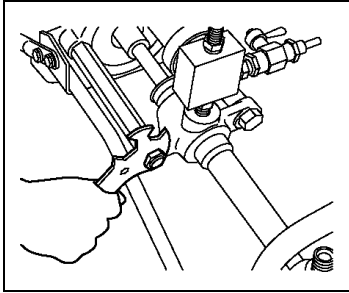


- ① Remove the accumulator hose.
Remove the nut for the stay that connects the pump housing (1).

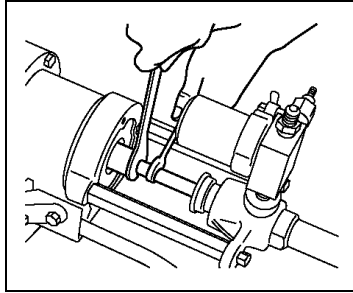


- ② Loosen the nut (19) disengaging the threaded portion of the rod and piston rod (6).
Disconnect the air motor from the material cylinder.

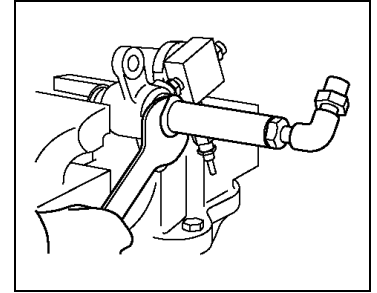


- ③ Remove the cylinder (14) from the pump housing (1).

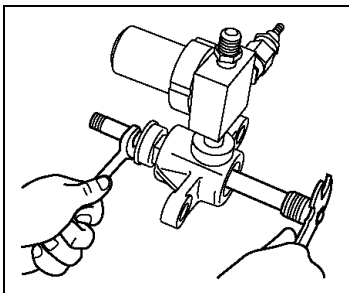

- ④ Remove the packing from the check valve (8).
Pull the pump housing off the body.

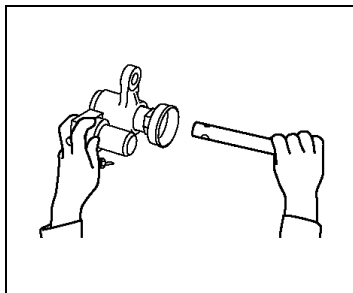


- ⑤ Put the packing retainer (2) back in.
Pull off the piston rod (6).
Remove the V packings.

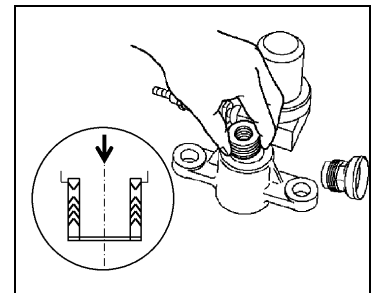


- ⑥ Put in new V packings, one by one.
(Install the packing gland and V packings with the convex side pointing up.)

Reassemble in the reverse order.


[Suction V Packing Replacement Procedure]

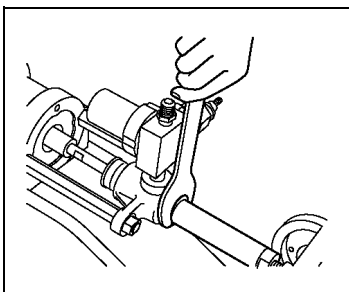

- ① Put a spanner on the two flat faces at the upper part of cylinder (14) and carefully unscrew to remove.
Then take out the piston rod (6) and V packings.

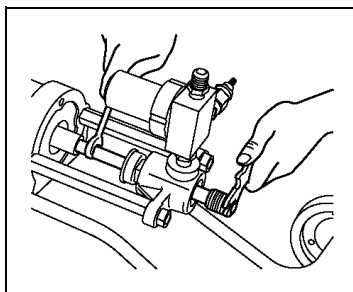

- ② Put a spanner on the piston rod (6) and unscrew the check valve (8) to remove it along with V packings.

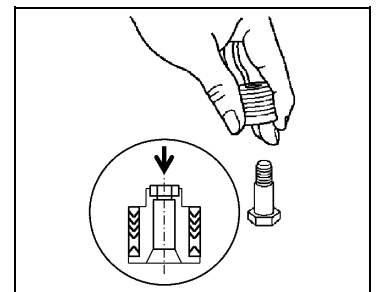

- ③ Install new V packings, one by one.
(Install the packing gland and V packings with the convex side pointing down.)

7

Troubleshooting

Symptom	Cause	Remedy
1. No fluid pressure	① Air regulator valve not opened.	① Fully open (turn clockwise).
	② Defective pressure gauge	② Replace it with a new one.
	③ Poor cleaning: Pump valve stuck due to hardened paint	③ Flush thoroughly with thinner. If hardened paint still remains after that, disassemble pump and clean.
2. Pressure does not rise to working pressure	① Air in fluid passage	① Pull spray gun trigger for air bubble purging through fluid circulation.
	② Insufficient fluid supply	② Replenish fluid.
	③ Worn V packings	③, ④ Replace V packings following V Packing Replacement Procedure.
	④ V packing installed in reversed direction	
	⑤ Clogged suction filter not sucking enough	⑤ Clean suction filter (8).
3. Pump runs, but amortizing poorly	① Insufficient compressed air supply capacity	① Replace compressor with one with larger capacity.
	② Compressed air supply hose too small in diameter	② Use larger hose in terms of diameter.
	③ Much compressed air consumed elsewhere	③ Provide a separate compressed air source for exclusive use.
	④ Air regulator not operating properly or setting pressure too low	④ Readjust.
	⑤ Insufficient fluid	⑤ Replenish fluid.
	⑥ Clogged material filter	⑥ Clean filter.
	⑦ Worn air motor valve or pump packing	⑦ Replace perishable parts with new ones following Parts Replacement Procedure.
	⑧ Nozzle of filter clogged with foreign materials	⑧ Flush and clean.
	⑨ Worn nozzle	⑨ Replace nozzle with a new one. (If worn too fast, suspect nozzle compatibility with fluid. Also, if pressure too high, nozzle service life gets shorter.)
4. Fluttering spray and tails	① (1) through (9) per 3 above, apply	① Check (1) through (9) per 3 above.
	② Fluid viscosity too high	② Adjust viscosity to proper level.
5. Pump does not stop when stop spraying	① No fluid	① Replenish fluid.
	② Leak from fluid passage	② Bring fluid pressure down to zero and retighten.
	③ Worn V packings	③ Replace V packings with new ones.
6. Pump fails to operate if compressed air introduced	① Seizure of rod and oiles metal	① Disassemble and clean rod and metal. Replace oil seal with new one. If damage is found to rod or metal replace.
	② Packing retainer, (2) on page 24, too tight	② Loosen packing retainer. The retighten it by hand until you can not turn it any further. Then turn it about another 15° ~ 30° using a spanner. That will be tight enough.
7. Air leak (Sound is heard when air leaks)	① Air valve is stuck in middle of stroke	① Remove cap and lift trip rod.
	② Air valve is defective	② Replace
	③ Spring is defective	③ Replace
8. Pump operates, but output low	① Clogged suction filter	① Remove and clean. If filter gets clogged all too soon, suspect incompatibility. Contact us.
	② Worn V packings affecting suction performance	② Replace packings with new ones
	③ Foreign materials between valve seat and ball	③ Remove and clean
9. Fluid flow suddenly stops while spraying	Clogged nozzle	Dip nozzle into thinner for a while to make foreign materials softer. Then blow out with compressed air from the opposite end.

NOTICE

V Packing Replacement Precautions

- (1) Install V packings in the correct direction with the convex side pointing in the right direction.
- (2) Cylinder^⑭ clearance should be such that it can be pushed in by hand. When it's too tight, do not use plain washers^⑪ at all or use only one washer. If the clearance is too tight, cylinder stroke may get sticky. If the clearance is too loose, suction failure may occur.
- (3) To mount the packing retainer^②, tighten it by hand as far as you can. Then tighten it further with a spanner for another 15° ~ 30°. If you tighten excessively, operational failure may occur. If you tighten insufficiently, oil leak may occur.

Proper retightening at the end of service work helps packing to last longer.

CAUTION

When you replace the suction filter^⑧ on page 19, be sure to wear safety gloves to avoid possible injury.

8


Performance Tips

- (1) Always pay attention to pressure
 - Don't raise output pressure more than required.
 - Always lock the trigger of your gun – each time you stop spraying for a break or interruption.
 - When you found leak from joint, Bring the pressure down, Drain the fluid, Locate the point of leakage, Retighten.
 - Use the lowest pressure possible, when: Flushing the fluid circulation passage in the system, Circulating fluid. (Air pressure at about 0.1MPa)
- (2) Is the material hose OK?
 - Is there any sharp bending along the line?
 - Are hose fittings tight enough?
 - No hose damage?
 - No trace of any heavy object placed on the hose?
- (3) When changing paints or adding additives
 - When you change paint fluid, thoroughly flush the can with solvent so that no paint residue may be left unremoved. (Paint residue may cause the nozzle to get clogged.)
 - When you add additives, do so through the filter.
 - When you change paint colors, take the suction pipe out of the paint can, pull the trigger discharging all paint from the system (this way you can save solvent), then flush it with solvent repeating suction-circulation-discharge circles as many time as it takes to completely flush the fluid passage from the inlet to outlet. After this, change paint color.

(Note) The specifications and configurations of this equipment are subject to change without prior notice due to improvements being made continuously.

9

Component Names

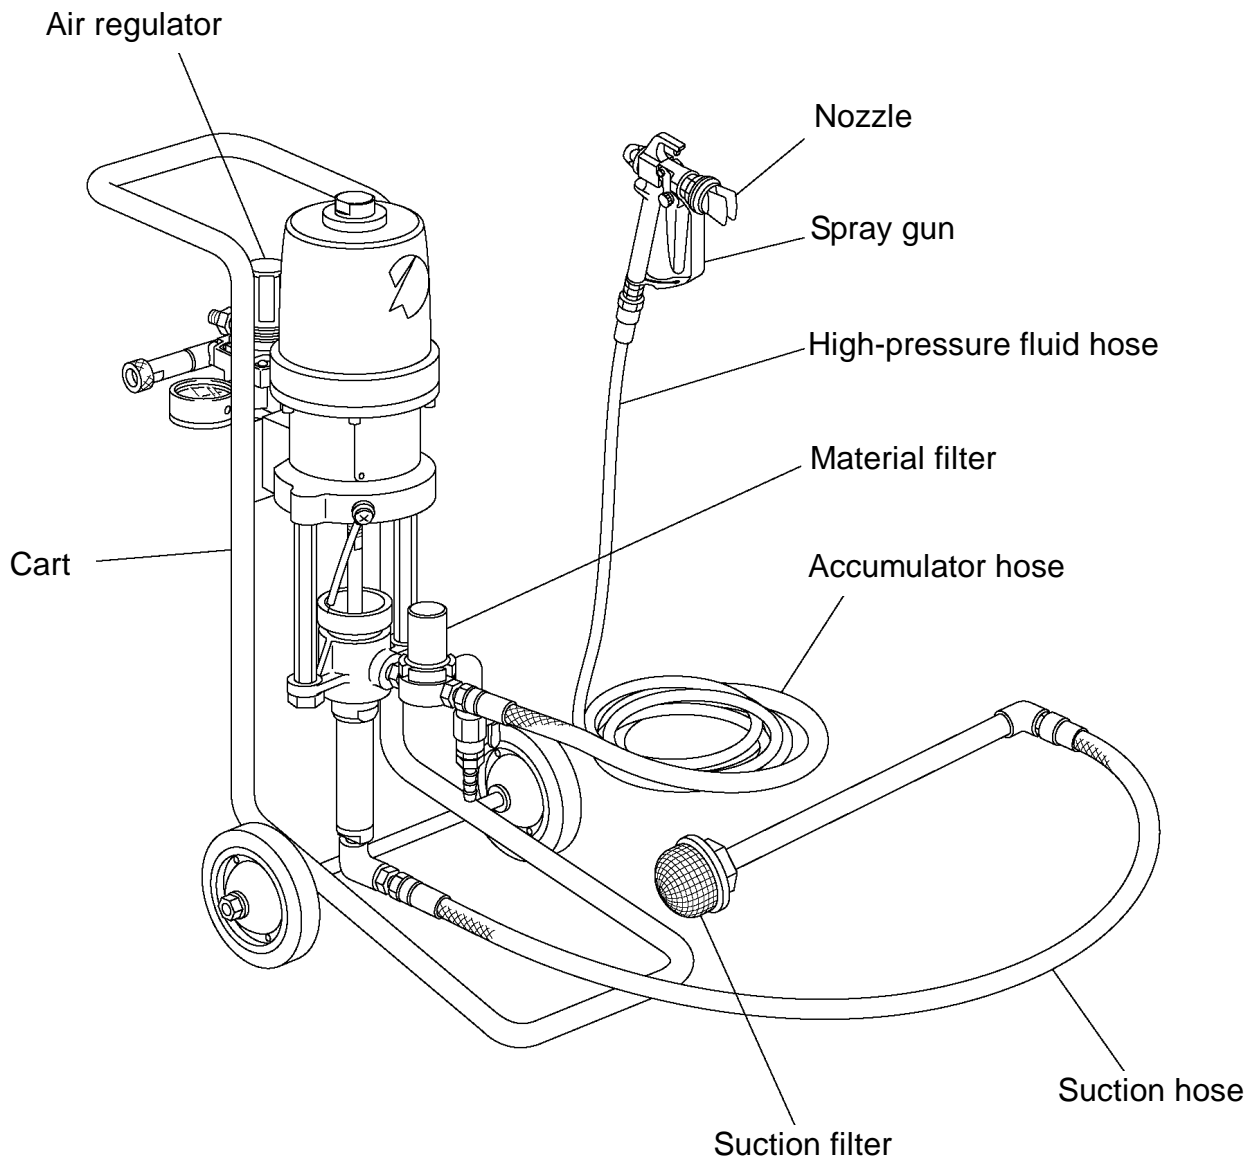

SP1628

40344-7

SP1636


40344-6

SP1628S

40378-4

SP1636S

40378-5

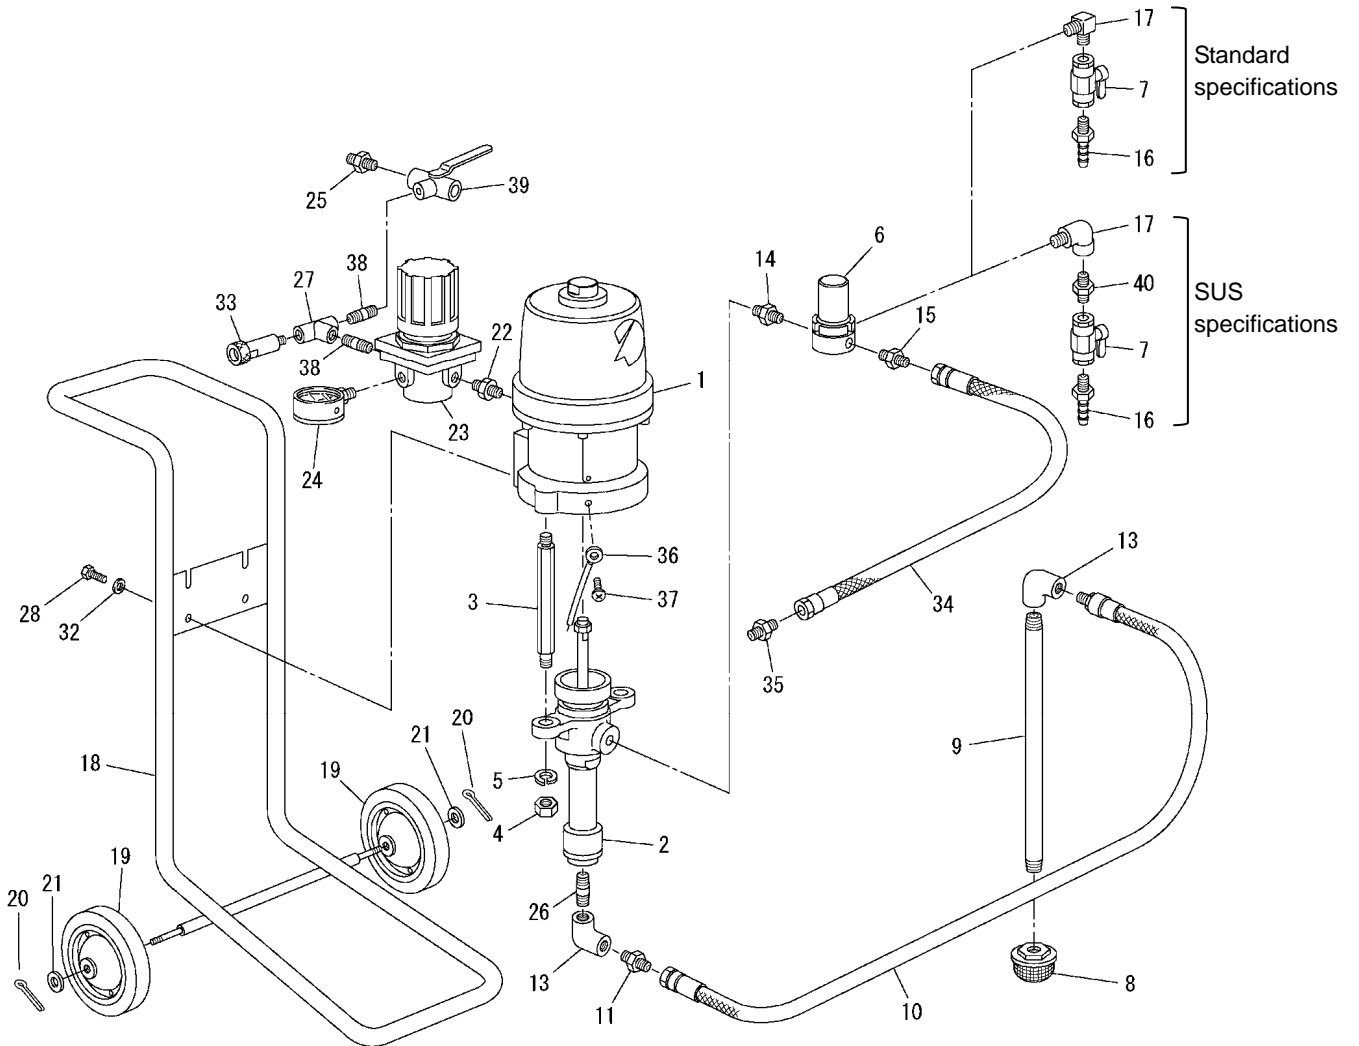

Airless Pump SP1628<40344-7>, SP1636<40344-6> Standard specifications

No.	Part No.	Part Name	Qty	Remarks
1	0102-4	Air motor	1	
2	0280-3	Material cylinder	1	SP1636
	0281-3			SP1628
3	4102-501	Stay	2	
4	15-11600	Hex. nut	2	
5	41-51600	Spring washer	2	
6	0410	Material filter	1set	
7	0902	Ball cock	1set	1/4
8	0527-046	Suction filter	1	40 mesh
9	4303-301	Suction pipe	1	
10	5605	Suction hose	1	
11	3201-049	Hose joint	1	
13	201-3006	Elbow	2	
14	287-2003	High-pressure nipple	1	
15	3201-012	Hose joint	1	
16	3203-001	Rubber hose joint	1	
17	279-2002	High-pressure elbow	1	
18	2076-201	Cart frame	1set	


No.	Part No.	Part Name	Qty	Remarks
19	309-0040	Caster	2	
20	49-10330	Split pin	2	
21	37-11200	Plain washer	2	
22	288-2001	High-pressure reducing nipple	1	
23	301-0025	Air regulator	1	
24	305-0003	Pressure gauge	1	
25	347-0001-1	Nipple	1	
26	242-1006	Barrel nipple	1	
27	205-3002	Tee	1	
28	01-11225	Hex. bolt	4	
32	37-11200	Plain washer	4	
33	1405	Nozzle cleaner	1set	
34	563-1020	Accumulator hose	1	
35	3202-211	Interim nipple	1	
36	40338-024	Grounding wire	1	
37	68-10406	Screw	1	
38	242-1002	Barrel nipple	2	
39	325-0009	Three-way ball cock	1	

Airless Pump SP1628S<40378-4>, SP1636S<40378-5> SUS specification

No.	Part No.	Part Name	Qty	Remarks
1	0102-4	Air motor	1	
2	0290-4	Material cylinder	1	SP1636S
	0291-2			SP1628S
3	4102-501	Stay	2	
4	15-11600	Hex. nut	2	
5	41-51600	Spring washer	2	
6	0411	Material filter	1set	
7	0913	Ball cock	1set	1/4
8	0527-046	Suction filter	1set	40 mesh
9	4323-301	Suction pipe	1	
10	5616	Suction hose	1	
11	3211-049	Hose joint	1	
13	201-4006	Elbow	2	
14	287-4003	High-pressure nipple	1	
15	3211-012	Hose joint	1	
16	3213-001	Rubber hose joint	1	
17	285-4002	High-pressure elbow	1	
18	2076-201	Cart frame	1set	
19	309-0040	Caster	2	

No.	Part No.	Part Name	Qty	Remarks
20	49-10330	Split pin	2	
21	37-11200	Plain washer	2	
22	288-2001	High-pressure reducing nipple	1	
23	301-0025	Air regulator	1	
24	305-0003	Pressure gauge	1	
25	347-0001-1	Nipple	1	
26	242-4006	Barrel nipple	1	
27	205-3002	Tee	1	
28	01-11225	Hex. bolt	4	
32	37-11200	Plain washer	4	
33	1405	Nozzle cleaner	1set	
34	563-2020	Accumulator hose	1	
35	3212-205	Interim nipple	1	
36	40338-024	Grounding wire	1	
37	68-10406	Screw	1	
38	242-1002	Barrel nipple	2	
39	325-0009	Three-way ball cock	1	
40	287-4002	High-pressure nipple	1	

Air motor
0102-4

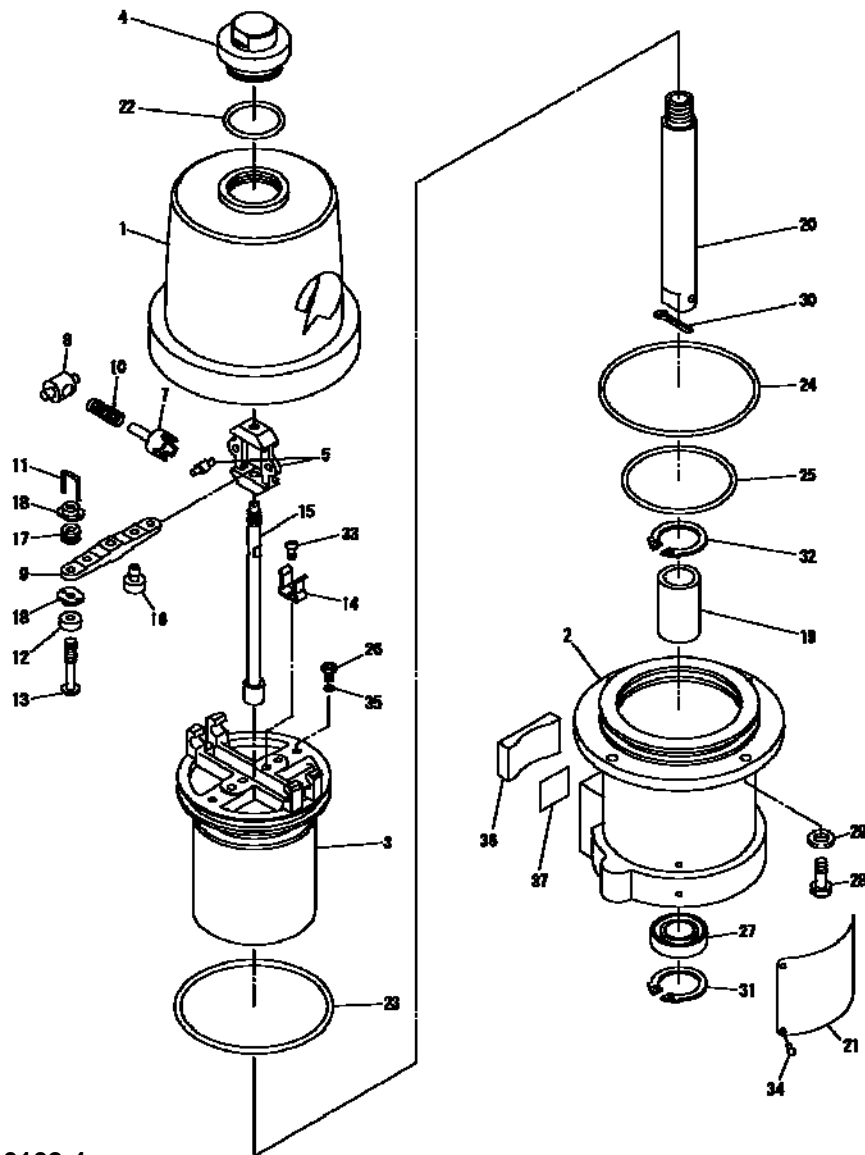

Air motor AC1610 <0102-4>

No.	Part No.	Part Name	Qty	Remarks
1	0102-701A	Cylinder	1	
2	0102-702A	Stand	1	
3	0102-703	Piston	1	
4	0101-304	Cap	1	
5	0101-005	Toggle shuttle	1	
6	Nil			
7	0102-007	Toggle arm	2	
8	0101-008	Toggle locker	2	
9	0105-009	Valve bar	1	
10	0102-110	Spring	2	
※11	0101-011	Wire	2	
※12	0101-012	Air valve	2	
13	0101-013	Stay	2	
14	0101-014	Clip	2	
15	0102-715	Trip rod	1	
※16	0101-016	Air valve	2	
※17	0101-017	Washer	2	
18	0101-118	Nut	4	
19	0101-019	Oilless metal	1	

No.	Part No.	Part Name	Qty	Remarks
20	0102-520	Rod	1	
21	0102-421	Name plate	1	
22	103-6025	O-ring	1	
※23	101-6150A	O-ring	1	
24	102-6165	O-ring	1	
※25	101-6115	O-ring	1	
26	0102-726	Bushing	2	
27	151-0001	Oil seal	1	
28	01-11240	Hex. bolt	4	
29	0C-91200	Spring washer	4	
※30	49-10432	Split pin	1	
31	56-13800	Stop ring	1	
32	56-13200	Stop ring	1	
33	68-10406	Cross recessed pan head screw	2	
34	91-40408	Parker stud	4	
35	146-7024	Gasket	2	
36	0102-039	Noise-canceling unit	1	
37	7333-045	Seat	1	

Items marked with ※ are the parts we recommend you to carry in stock.

Material cylinder

0280-3

Material cylinder


0281-3

Material cylinder

0290-4

Material cylinder

0291-2

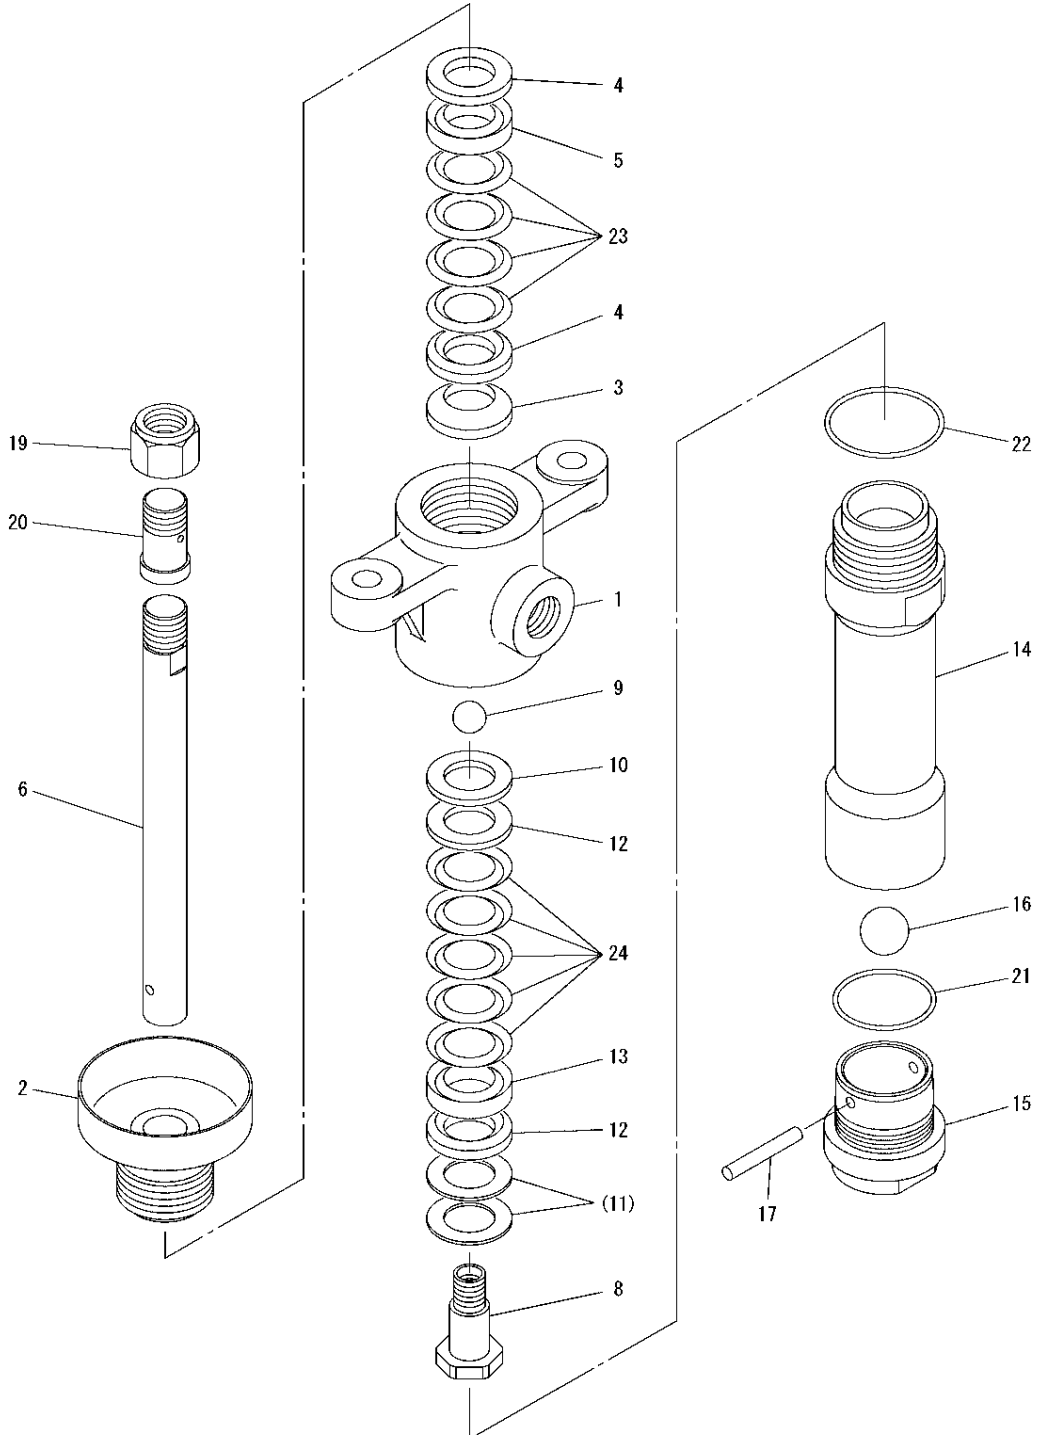

Material cylinder<0280-3(1:20)>, <0281-3(1:30)>

No.	Part No.	Part Name	Qty	Remarks
1	0280-001A	Pump housing	1	
	0280-001A			
2	0280-302	Packing retainer	1	
	0281-302			
3	0280-325	Ring spring	1	
	0280-325			
4	0280-013	Packing retainer	2	
	0281-005			
5	0280-003	Retainer	1	
	0281-007			
6	0280-106	Piston rod	1	
	0281-106			
8	0280-108	Check valve	1set	
	0281-108			
※9	0280-009	Valve ball	1	
	0210-009			
10	0280-010	Ring	1	
	0281-010			
11	0280-011	Plain washer	(2)	There are cases where this item is not used.
	0202-011			
12	0280-013	Packing retainer	2	
	0281-013			

No.	Part No.	Part Name	Qty	Remarks
13	0280-003	Retainer	1	
	0281-003			
14	0280-014	Cylinder	1	
	0281-114			
15	0280-115	Foot valve	1set	
	0280-115			
※16	0280-016	Valve ball	1	
	0280-016			
17	0280-017	Pin	1	
	0280-017			
19	0280-019	Nut	1	
	0280-019			
20	0280-020	Special joint	1	
	0280-020			
21	102-2040	O-ring	1	
	102-2040			
22	102-2045	O-ring	1	
	102-2045			
※23	V852600366	V packing	4	
	V852000366			
※24	V852600366	V packing	5	
	V851500285			

Items marked with ※ are the parts we recommend you to carry in stock.
 ※ Part number in the upper box is for 1:20 and that in the lower box is for 1:30.

SUS specification

Material cylinder<0290-4(1:20)>, <0291-2(1:30)>

No.	Part No.	Part Name	Qty	Remarks
1	0290-001	Pump housing	1	
	0290-001			
2	0290-402	Packing retainer	1	
	0291-202			
3	0280-325	Ring spring	1	
	0280-325			
4	0290-013	Packing retainer	2	
	0291-005			
5	0280-003	Retainer	1	
	0281-007			
6	0290-106	Piston rod	1	
	0291-106			
8	0290-008	Check valve	1set	
	0291-108			
※9	0290-109	Valve ball	1	
	0291-009			
10	0290-010	Ring	1	
	0291-010			
11	0290-011	Plain washer	(2)	There are cases where this item is not used.
	0222-011			
12	0290-013	Packing retainer	2	
	0291-013			

No.	Part No.	Part Name	Qty	Remarks
13	0280-003	Retainer	1	
	0281-003			
14	0290-114	Cylinder	1	
	0291-214			
15	0290-015	Foot valve	1set	
	0290-015			
※16	0290-116	Valve ball	1	
	0290-116			
17	0290-017	Pin	1	
	0290-017			
19	0290-019	Nut	1	
	0290-019			
20	0290-020	Special joint	1	
	0290-020			
21	102-2040	O-ring	1	
	102-2040			
22	102-2045	O-ring	1	
	102-2045			
※23	V852600366	V packing	4	
	V852000366			
※24	V852600366	V packing	5	
	V851500285			


Items marked with ※ are the parts we recommend you to carry in stock.
 ※ Part number in the upper box is for 1:20 and that in the lower box is for 1:30.

Material filter

0410

Material filter

0411

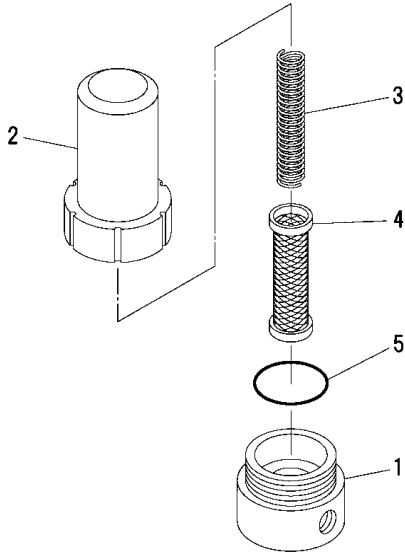


Ball cock

0902

Ball cock

0913

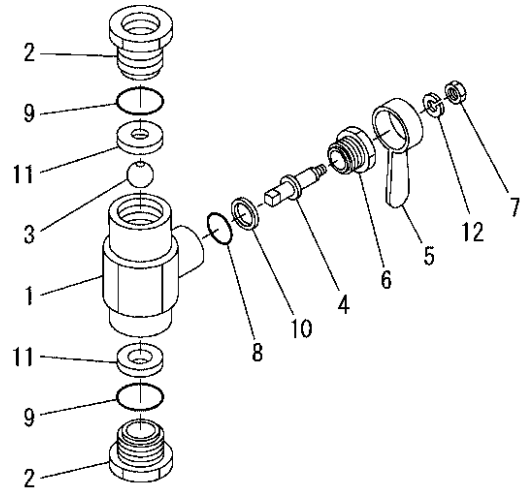

Material filter MF50E <0410>

No.	Part No.	Part Name	Qty	Remarks
1	0410-001	Filter base	1	
2	0410-002	Housing	1	
3	0402-005	Spring	1	
※4	0402-004-06	Screen	1	60mesh
※5	102-2040	O-ring	1	

Items marked with ※are the parts we recommend you to carry in stock.

Material filter MF50ES SUS specification <0411>

No.	Part No.	Part Name	Qty	Remarks
1	0411-001	Filter base	1	
2	0411-002	Housing	1	
3	0412-005	Spring	1	
※4	0412-004-06	Screen	1	60mesh
※5	102-2040	O-ring	1	

Items marked with ※are the parts we recommend you to carry in stock.

Ball cock HPC2T <0902>

No.	Part No.	Part Name	Qty	Remarks
1	0902-001	Body	1	
2	0902-002	Nipple	2	
3	0902-003	Ball	1	
4	0902-004	Shaft	1	
5	1507-107	Handle	1	
6	0902-006	Screw	1	
7	0902-007	Nut	1	
※8	103-6004	O-ring	1	
※9	103-6009	O-ring	2	
※10	144-2002	Packing	1	
※11	145-2006	Packing	2	
12	41-50400	Spring washer	1	

Items marked with ※are the parts we recommend you to carry in stock.

Ball cock HPC2TS SUS specification <0913>

No.	Part No.	Part Name	Qty	Remarks
1	0913-001	Body	1	
2	0913-002	Nipple	2	
3	0902-003	Ball	1	
4	0913-004	Shaft	1	
5	1507-107	Handle	1	
6	0913-006	Screw	1	
7	0902-007	Nut	1	
※8	103-6004	O-ring	1	
※9	103-6009	O-ring	2	
※10	144-2002	Packing	1	
※11	145-2006	Packing	2	
12	41-50400	Spring washer	1	



Items marked with ※are the parts we recommend you to carry in stock.

<Option>

Suction filter
0502

Suction filter
0521

Nozzle cleaner
1405

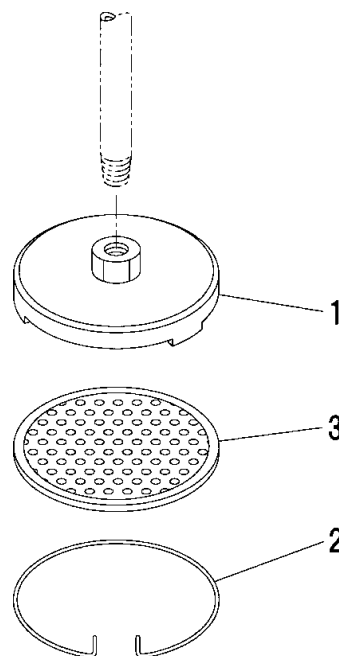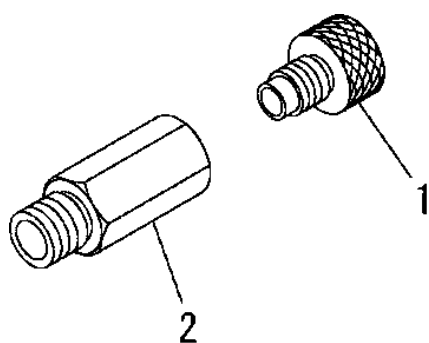

Nozzle cleaner NC <1405>

No.	Part No.	Part Name	Qty	Remarks
1	1405-001A	Nipple	1	Including Packing
2	1405-002	Socket	1	

<Option>

Suction filter SF1406

No.	Part No.	Part Name	Qty	Remarks
1	0502-001	Filter body	1	
2	0502-002	Snap	1	
※3	0502-003-04	Screen	1	40 mesh

Items marked with ※ are the parts we recommend you to carry in stock.

Suction filter SF1406S SUS specification

No.	Part No.	Part Name	Qty	Remarks
1	0502-001	Filter body	1	
2	0502-002	Snap	1	
※3	0512-003-04	Screen	1	40 mesh

Items marked with ※ are the parts we recommend you to carry in stock.

10

Maintenance Log

Shown below is a maintenance log format of a kind we recommend you to keep. Each time that you conduct a maintenance service, such as replacement of a part, tear-down cleaning, post-failure repair, etc., record the details. In the long run, you will find that such a log is very valuable in keeping your equipment in a consistently good operating condition.

Equipment name	ECO PUMP LIGHT 20, 30 <SP1636/28(S)>		Date of acquisition: YYYY/MM/DD	
Date of service	Portion worked on	Description	Results	Who serviced
				In-house / Agency / Asahi Sunac
				In-house / Agency / Asahi Sunac
				In-house / Agency / Asahi Sunac
				In-house / Agency / Asahi Sunac
				In-house / Agency / Asahi Sunac

NOTE: Due to continuous improvements and modifications, the configurations and specifications of the equipment specified herein are subject to change without prior notice.

11

Warranty

ASAHI SUNAC CORPORATION (the "Company") shall provide the original purchaser (the "Purchaser") with warranty service for a period of one (1) year from the date of purchase of the product, as follows:

- Should you find defects in design or workmanship with regard to parts, ship them back to the Company, with freight prepaid. The Company shall repair or replace the parts free of charge and reimburse the freight charges, provided that, as a result of an inspection and investigation of the parts conducted by the Company, the defects are deemed to be attributable to the factors within the Company's responsibility.
- In the following cases, free after-sales service is not provided.
 1. Failure resulting from an inappropriate method of installing this equipment.
 2. Failure resulting from a use method not conforming to this instruction manual or mishandling.
 3. Failure resulting from insufficient maintenance management of this equipment and incorrect handling such as non-conformance to the procedures specified in this instruction manual.
 4. Failure resulting from unauthorized alteration or structure change of this equipment without the Company's consent.
 5. Failure due to force majeure such as earthquake, disaster, flood disaster or lightning.
 6. Warranty for consumables worn or deteriorated even in the case where this equipment is used correctly.
 7. Repair after the machine has been used outside Japan, and shipping cost.
 8. In addition to the above, failure due to circumstances beyond our control.
- As for items such as parts purchased by the Company from another manufacturer, the warranty of that manufacturer shall apply.
- As for any parts deemed to be defective, the Company shall not be held liable for any expenses beyond the provision of repair or replacement parts free of charge.
- The Company shall not be held liable for any damage to the Purchaser caused by factors not attributable to the Company, such as misuse of product, etc.

-
- When a transfer of title of this equipment takes place, please ensure that this Operation and Maintenance Manual is handed over to the new owner.
 - This equipment is manufactured in compliance with the Laws and Regulations of Japan.
In the rare eventuality of this equipment being used outside Japan, compliance with the safety standards of the relevant countries is of course mandatory.
-

21th Edition: March 13, 2016



Leading Manufacturer of Coating FA Systems
ASAHI SUNAC CORPORATION
Head office & Factory: 5050 Asahimae-cho, Owariasahi, Aichi 488-8688 Japan

TEL 81-561-52-0717 FAX 81-561-54-8847
e-mail: ctrd01@sunac.co.jp